

How to Replace the Power Board on ILVE Panoramagic Ranges



Replacing the Power Board:

If your ILVE Panoramagic range is experiencing power or control issues, replacing the power board may be necessary. This guide walks you through each step to safely and correctly replace the power board inside your unit. This procedure is best performed by a licensed technician or a confident DIYer with basic electrical knowledge.

Tools Required:

- Screwdriver
- Small Pliers
- Replacement ILVE power board
- Camera or Notepad to record cable positions

How to Replace the Power Board on ILVE Panoramagic Ranges



Step 1: Remove the Back Cover


Use the screwdriver to remove the screws securing the rear panel of the unit.

Step 2: Take Cable Notes

Document the positions of all cables connected to the board before disconnecting them. A quick photo is ideal.

Step 3: Disconnect the Cables

Gently unplug all cables from the power board.

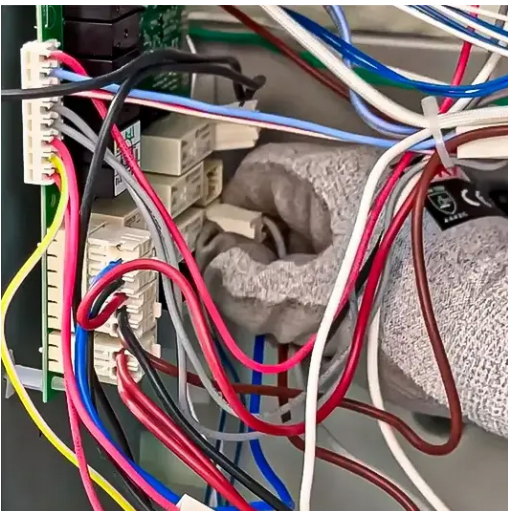

Step 4: Remove the Power Board

Use small pliers to carefully pull the power board out of its slot.

Step 5: Install the New Power Board

Insert the replacement power board into the correct position and ensure it's fully sealed.

Step 6: Reconnect the Cables


Plug all cables back into their original locations using your notes or photo for reference.



Step 7: Close the Back Cover

Reinstall the back panel and tighten all screws securely.

How to Replace the Power Board on ILVE Panoramagic Ranges

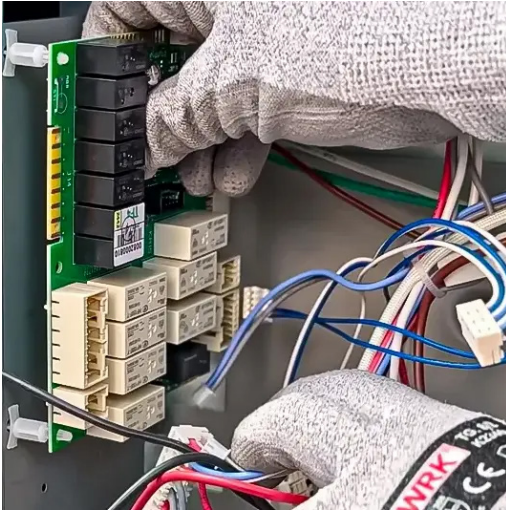

Final Recommendations

- Refer to the full ILVE Installation Manual for clearance requirements and connection guidelines.
- Always hire a licensed professional for gas and electrical installations.
- Register your ILVE Range online to activate your warranty and receive product support.

Need further assistance? Visit us.ilve.com or contact our support team.

