

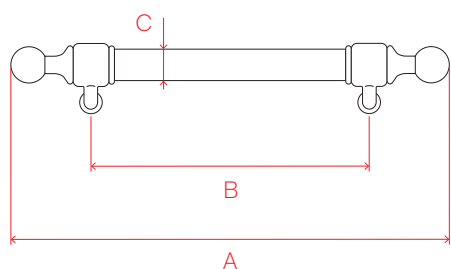


Handles installation

→ CONTENTS



- 1 Handle
- 2 Screws x 1"
- 2 Flat washers
- 2 Star washers
- 2 Special supports

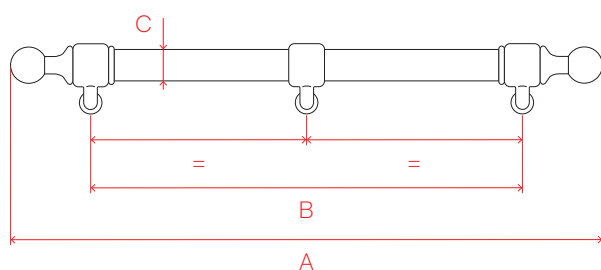


(*)

→ NOSTALGIE HANDLE DIMENSIONS (inch)



CODE	A	B	C	D
KMN4270061	12 $\frac{1}{16}$ "	7 $\frac{1}{16}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN4270072	16 "	11 $\frac{5}{8}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN4270071	20 $\frac{15}{16}$ "	16 $\frac{9}{16}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN4270069	24 $\frac{7}{8}$ "	20 $\frac{1}{2}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN4270070	29 "	24 $\frac{5}{8}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN1066017	36 "	31 $\frac{5}{8}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN1066019	42 "	37 $\frac{5}{8}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "
KMN1066021 (*)	53 $\frac{5}{8}$ "	49 $\frac{3}{16}$ "	$\frac{7}{8}$ "	1 $\frac{15}{16}$ "

Handles installation

→ CONTENTS

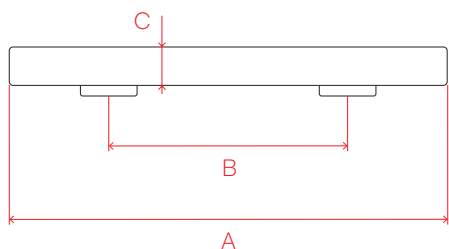

- 1 Handle
- 2 Screws x 1"
- 2 Flat washers
- 2 Star washers
- 2 Special supports

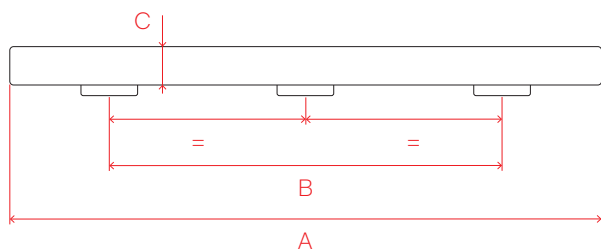

(*)

→ PROFESSIONAL PLUS HANDLE DIMENSIONS (inch)


CODE	A	B	C	D
KMP4270057	11 ¼ "	6 ⅞ "	1 "	2 ⅜ "
KMP4270058	14 ⅜ "	9 ¼ "	1 "	2 ⅜ "
KMP4270056	20 11/16 "	15 5/16 "	1 "	2 ⅜ "
KMP4270054	25 9/16 "	20 ½ "	1 "	2 ⅜ "
KMP4270053	26 15/16 "	21 7/8 "	1 "	2 ⅜ "
KMP1066016	34 ¼ "	29 1/8 "	1 "	2 ⅜ "
KMP1066018	42 11/16 "	37 5/8 "	1 "	2 ⅜ "
KMP1066020 (*)	54 5/16 "	49 3/16 "	1 "	2 ⅜ "

Handles installation



→ INSTALLATION

Panels thicker than 13/16" may require additional counter bore depth or longer screws.

1. Use the chart to determine the correct hole location, then mark and drill two 7/32" holes.
2. Counter bore panels so the screw heads and washers are completely recessed.
3. Place a star and flat washer on each screw, then insert the screw through the panel.

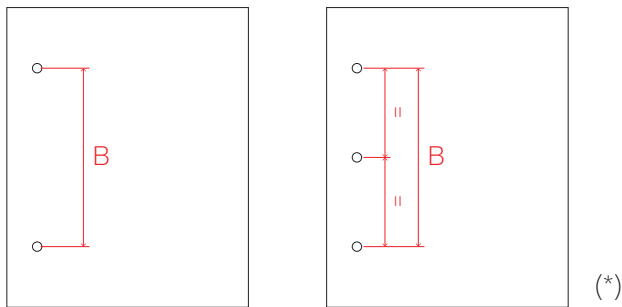

4. Insert the screws through the standoffs and into the special supports.
5. Tighten the screws to secure the handle to the special supports.

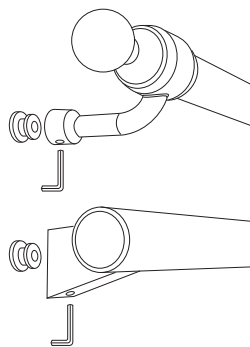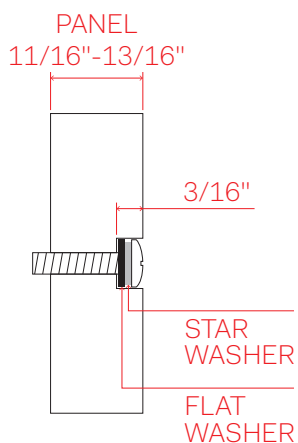

→ POSITIONING

