

How to Replace the TFT Display on ILVE Panoramagic Ranges



Replacing the TFT Display:

Replacing the TFT display on an ILVE Panoramagic range is a delicate but straight forward process when done with care. This guide outlines the full replacement procedure, from disassembling the cooktop to safely removing and installing the new screen.

Whether you're a certified technician or an advanced DIY user, follow these detailed steps to ensure a safe and accurate display replacement.

Tools Required:

- Phillips Screwdriver
- Torx T10 Screwdriver
- Flathead Screwdriver
- Heat Gun
- Microfiber Cloth
- Replacement TFT Display
- Marker or labels for cable Identification

How to Replace the TFT Display on ILVE Panoramagic Ranges



Step 1: Remove the Grates and Burners


Take off all grates and burner caps from the cooktop.

Step 2: Remove the Rear Cover

Use a Phillips screwdriver to detach the rear metal cover.

Step 3: Unscrew the Burner Screws

Unscrew all visible Torx screws on each burner.

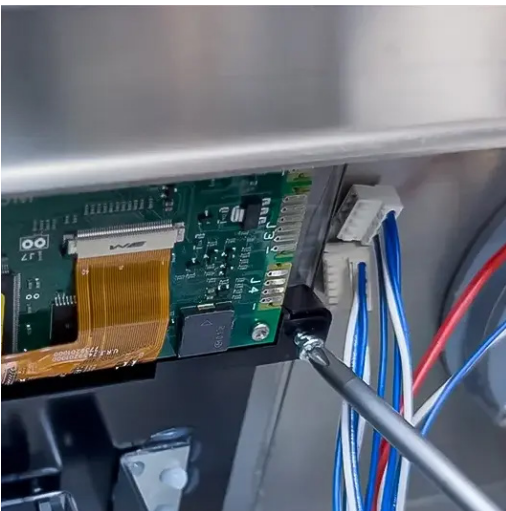

Step 4: Lift and Remove the Cooktop

Apply upward pressure to loosen and remove the entire cooktop surface.

Step 5: Detach and Label Cables

Carefully unplug all display cables and mark their sequence for reinstallation.

Step 6: Unscrew the Display Support

Remove the support bracket securing the display panel.



Step 7: Use Heat Gun to Soften Adhesive


Apply heat in slow circular motions while keeping at least 5cm of distance to prevent varnish damage.

Step 8: Remove the Display Panel

Gently lift the TFT display.

Note: If the pull tab breaks, use a flathead screwdriver to pry it off carefully.

How to Replace the TFT Display on ILVE Panoramagic Ranges

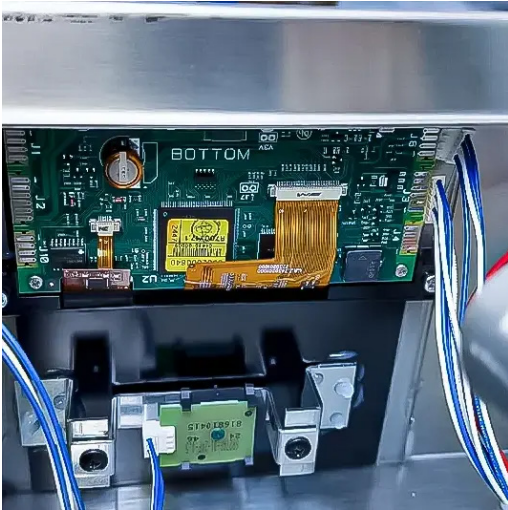

Step 9: Clean the Area

Wipe away any adhesive residue using a microfiber cloth.

Step 10: Insert the New Display

Position the replacement display securely in place.

Step 11: Reattach the Support

Screw the support bracket back over the new display.



Step 12: Reconnect the Cables

Plug in each cable according to the sequence marked earlier.

Step 13: Reposition the Cooktop

Make sure the gasket is correctly seated before replacing the top.

Step 14: Tighten the Torx Screws

Secure the cooktop by tightening all Torx screws on the burners.

Final Recommendations

- Refer to the full ILVE Installation Manual for clearance requirements and connection guidelines.
- Always hire a licensed professional for gas and electrical installations.
- Register your ILVE Range online to activate your warranty and receive product support.

Step 15: Reattach the Rear Cover

Fasten the rear cover into place.

Step 16: Reinstall the Burners and Grates

Place all burners and grates back where they belong.

Need further assistance? Visit us.ilve.com or contact our support team.